



Quick Guide


SAMSUNG LASER PRINTER ML-1200 SERIES

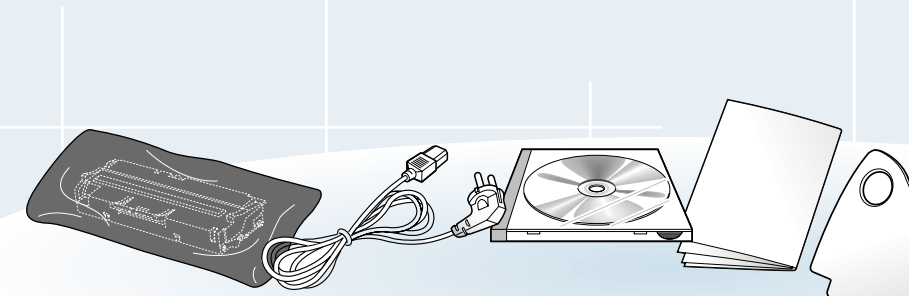



If any items are missing or damaged, notify your dealer immediately. Components may differ from one country to another.

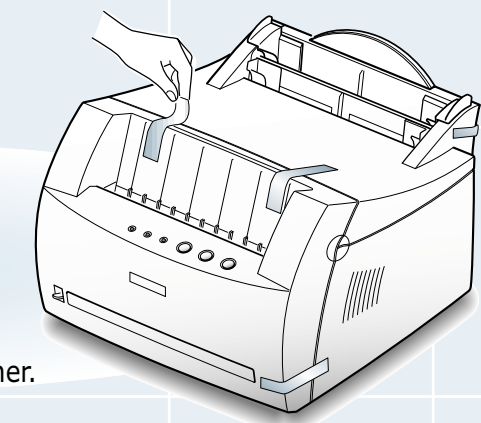


Attach the supplied paper output support as shown.

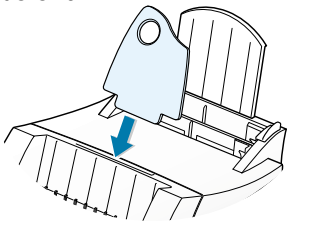




1 Install the Toner Cartridge

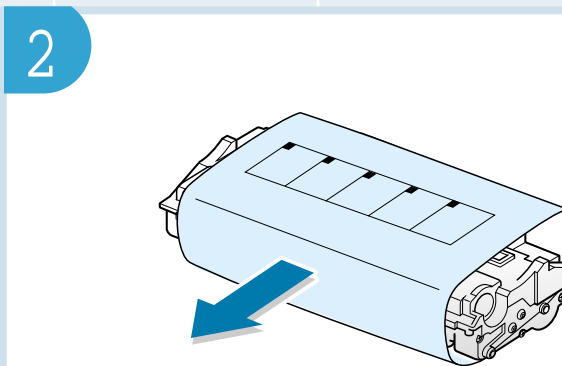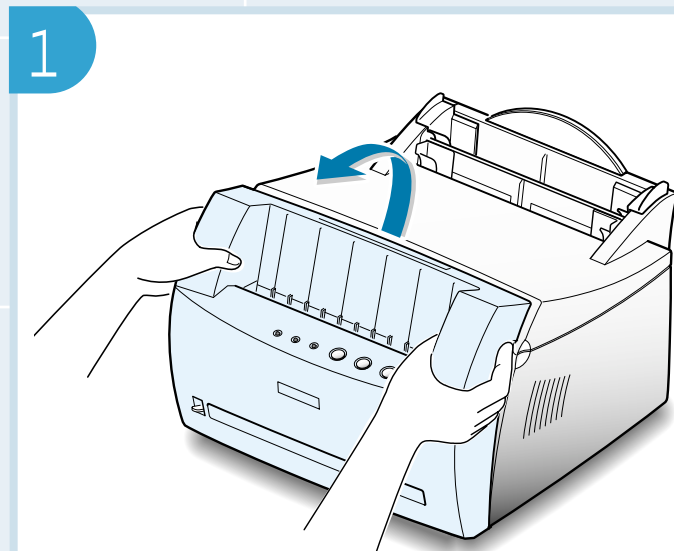

Remove the toner cartridge from its bag and remove the paper covering the cartridge.

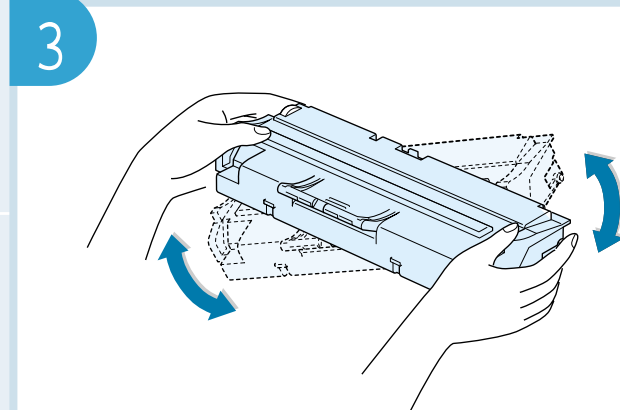




Gently shake the cartridge from side to side to distribute the toner evenly inside the cartridge.

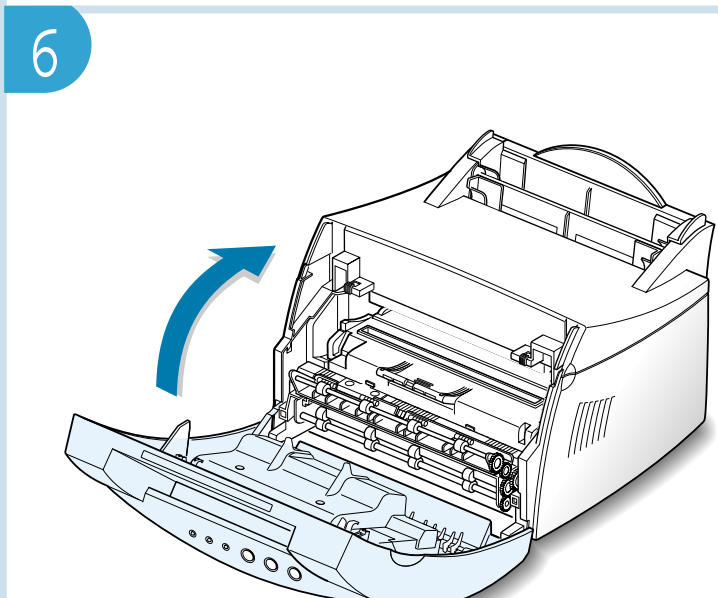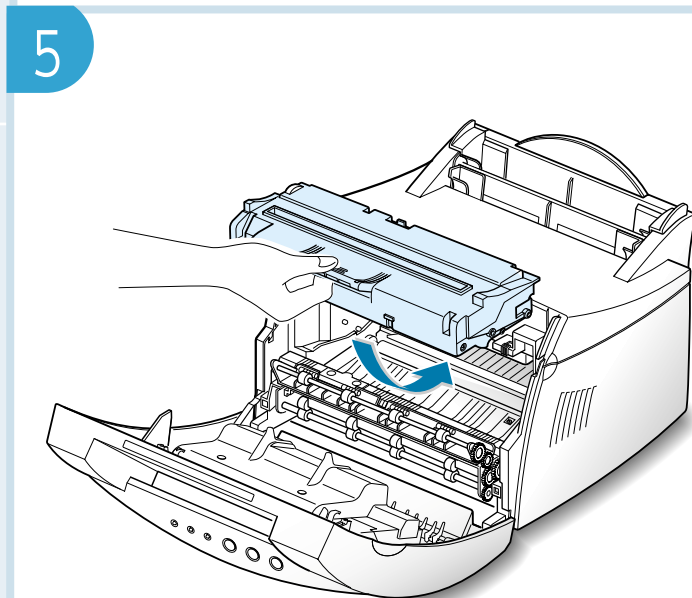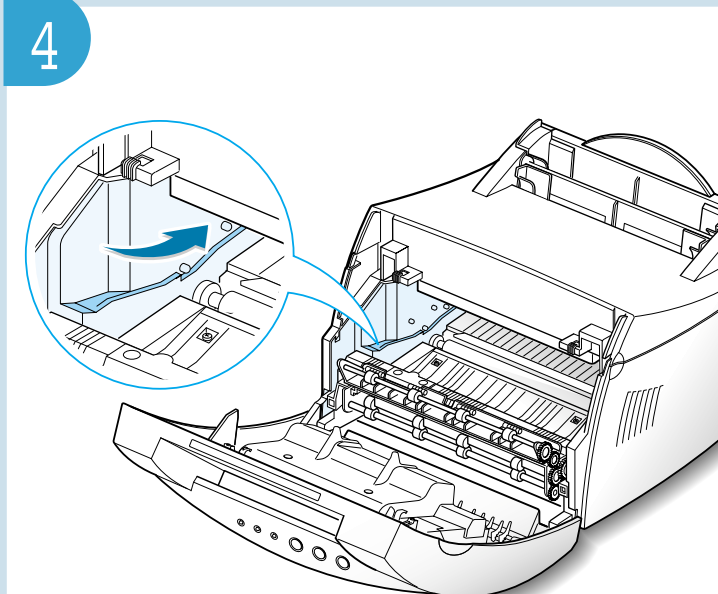


CAUTIONS:

- To prevent damage, do not expose the toner cartridge to light for more than a few minutes. Cover it with a piece of paper.
- If toner gets on your clothing, wipe it off with a dry cloth and wash clothing in cold water. **Hot water sets toner into fabric.**


2 Load Paper

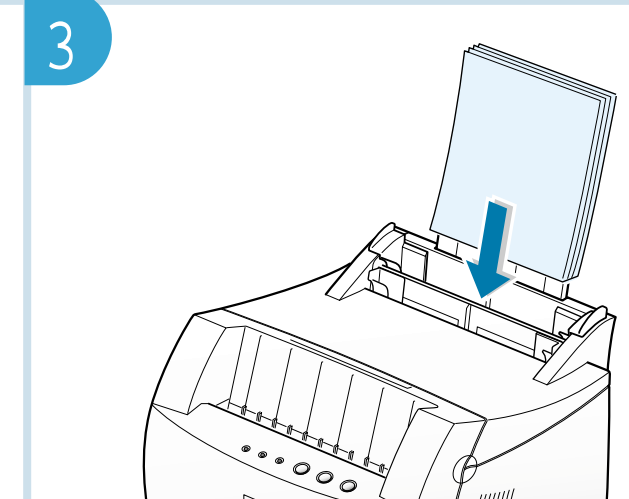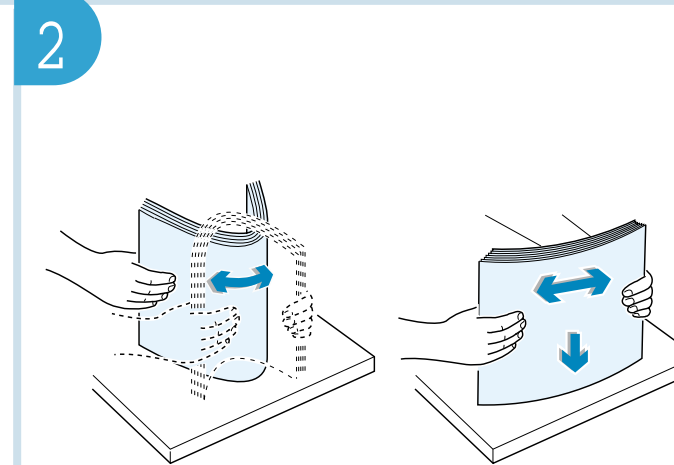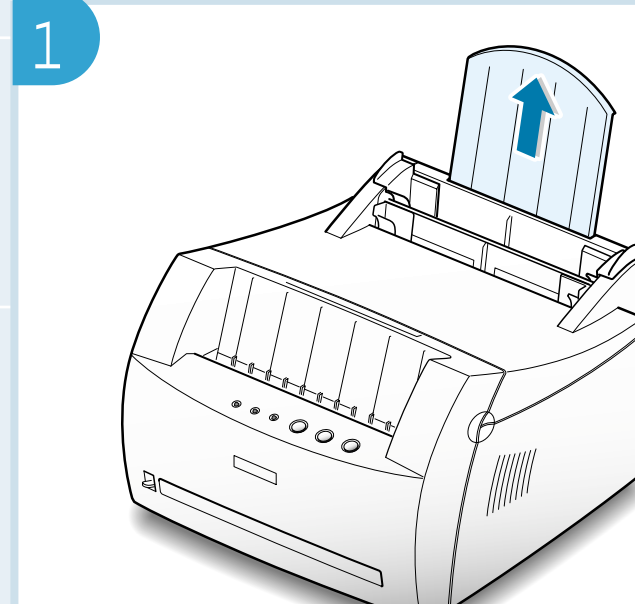

Load a stack of paper with the print side facing up.

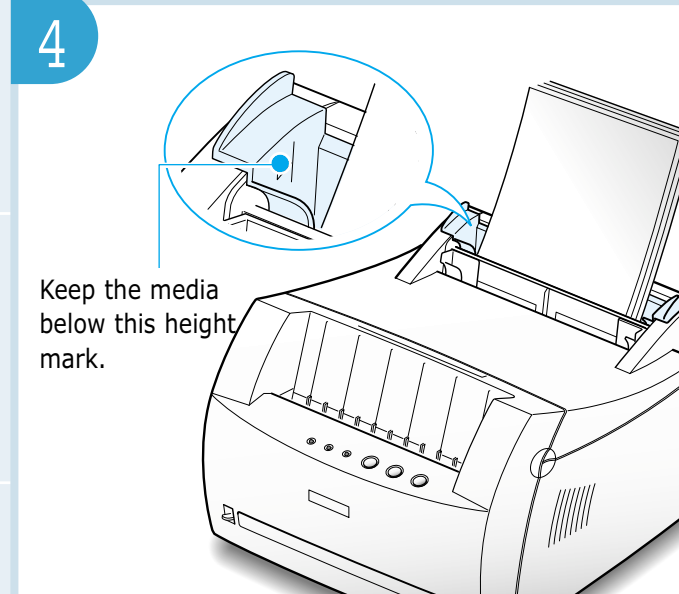

Keep the media below this height mark.

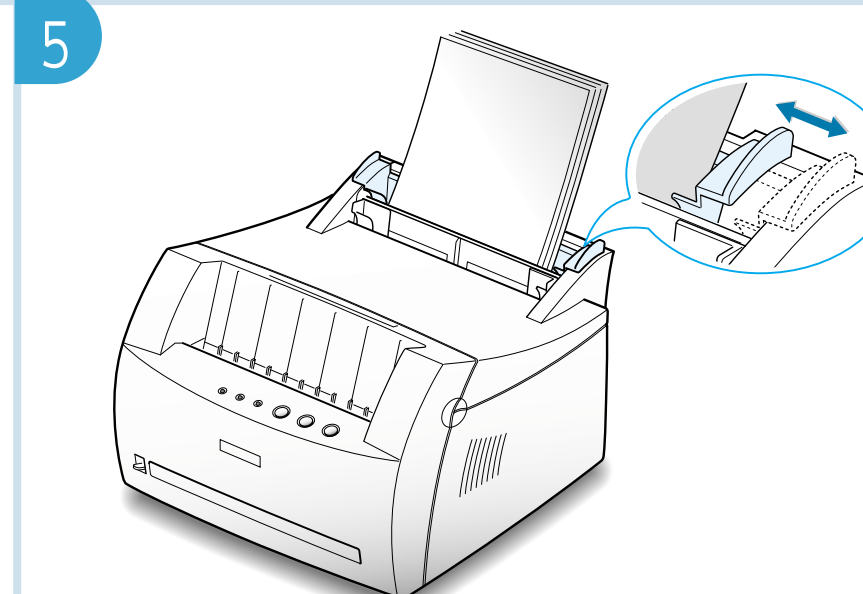


Notes:

- Do not push the width guide far enough to cause the media to move up.
- If you do not adjust the width guide, it may cause paper jam.
- If you are needed to add more sheets of paper while printing, remove the remaining paper from the tray at first. Then, reinsert them with the new paper. Note that adding new paper into the remains in the tray may cause paper jams or multiple feeding.


3 Connect to the Computer with a Parallel Cable (ML-1210 Only)

Make sure both the printer and the computer are turned off.

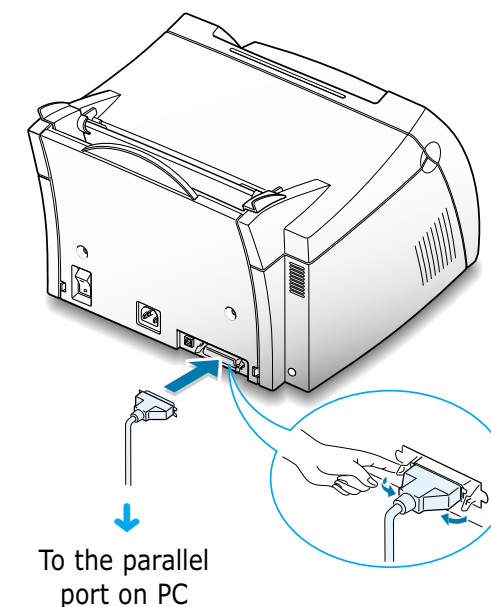

To the parallel port on PC

4 Power on the Printer

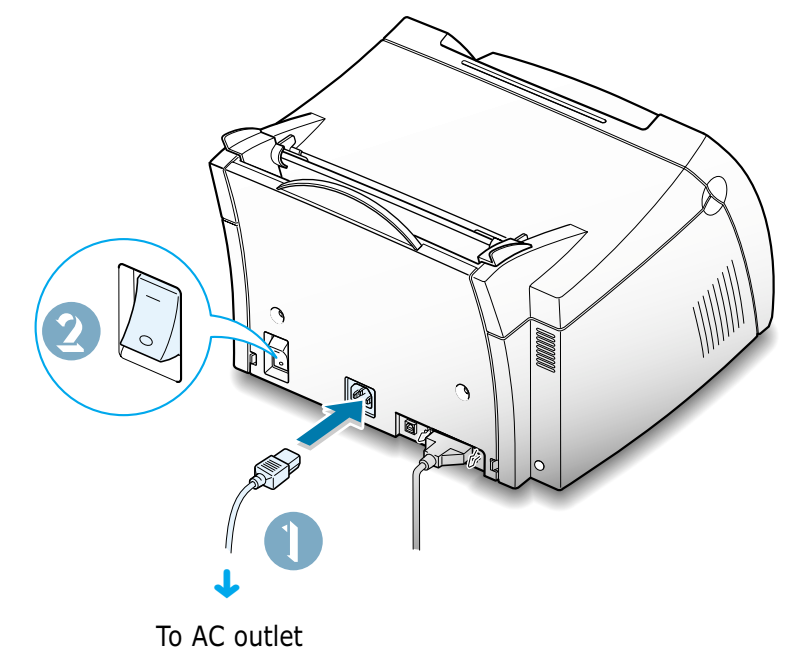

To AC outlet




Visit us at
<http://www.samsungprinter.com>



JC68-00687AV100

5


Test the Printer (Print Demo Page)

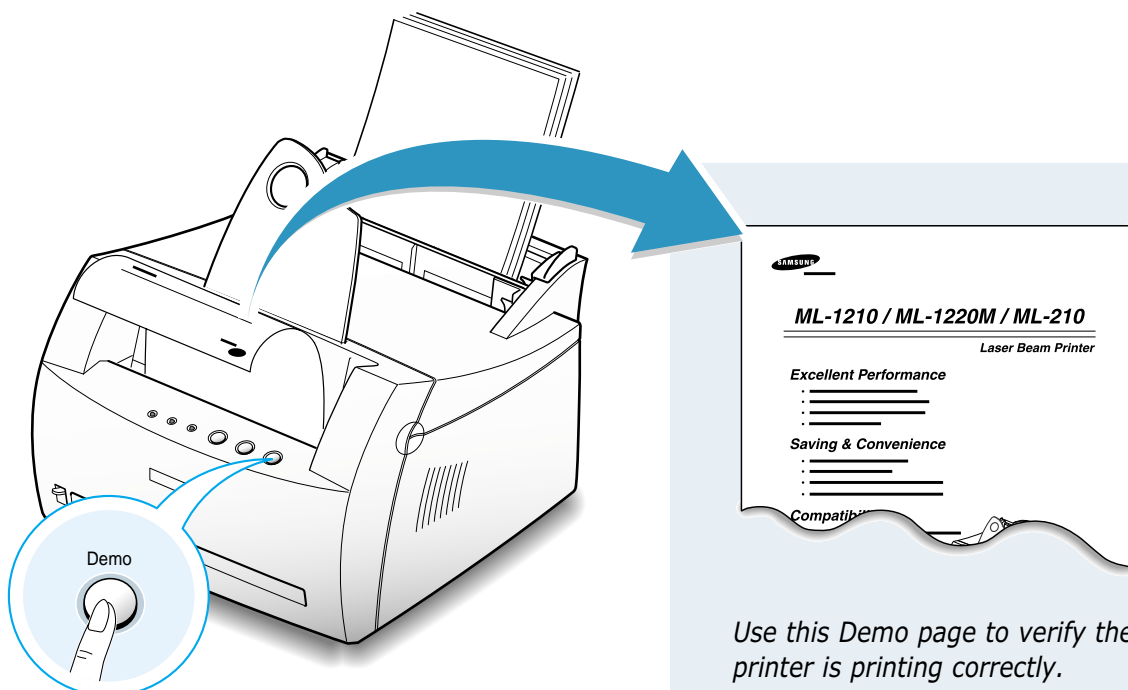

Press and hold for about 2 seconds until all lights blink slowly, then let it go.

Use this Demo page to verify the printer is printing correctly.

Using Control Panel

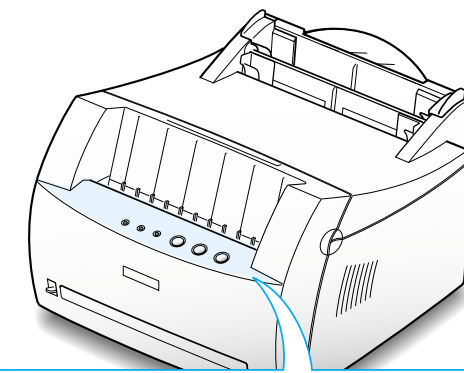

Control Panel Buttons

- Demo**
 - Prints demo page. Press and hold this button for about 2 seconds.
 - Starts manual feeding. Press this button after loading a sheet of paper in the manual input tray.
 - Cleans the inside of the printer. Press and hold this button for about 10 seconds.
- Cancel/Reprint**
 - Cancels job the printer is currently printing. Press this button during a print job to cancel it.
 - Reprint last page of the job. Press this button in the Ready mode.
- Toner Save**
 - Turns the Toner Save mode on or off.
 - Backlight is on-The printer will use less toner.
 - Backlight is off-Normal mode.

Control Panel Lights

- Data (on)**
 - The printer is ready to print.
- Data (blinking)**
 - The printer is receiving or processing data. Wait for the job to print.
- Paper (on)**
 - The printer is out of paper. Load paper into the printer. For the automatic input tray, loading paper will cancel this message and allow you to continue with the print job. For the manual input tray, press the **Demo** button after loading.
 - If this light is on with the **Error** light, it means that a paper jam occurs or the toner cartridge is not installed. Clear the jam or check the toner cartridge..
- Paper (blinking)**
 - The printer is waiting the **Demo** button to be pressed in the manual feed mode. Press the **Demo** button to start printing.
- Error (on)**
 - The printer is in an error state, such as the cover is opened. Check the front cover.
- Error (blinking)**
 - The printer memory ran out of memory in the middle of a print job. Press the **Cancel/Reprint** button to cancel the current job. Simplify the image or print at a lower resolution.

Note: For details on using the control panel, refer to the User's Guide shipped with your printer.

6

Install the Printer Software

To operate your printer, you must install a printer driver, which translates data from your application into data the printer understands.

The CD-ROM shipped with your printer contains the following printer drivers and utilities:

- PrintThru** printer driver for Windows
- Linux Driver** for the Linux system
- USB Driver** for the USB interface
- PrintThru** printer driver for Macintosh
- User's Guide**
- Adobe Acrobat Reader program** for the User's Guide
- Make Your Own Diskette setup software**

Note: For information on installing the Linux driver, USB Driver, PrintThru driver for Macintosh refer to the User's Guide provided with your printer.

Before Installing Printer Software

Verify the following:


- At least **16 MB or more of RAM** is installed on your PC.
- There is at least **50 MB of free disk space** on your PC.
- All applications are closed on your PC before beginning installation.**
- Windows 95, Windows 98, Windows Me, Windows NT 4.0, Windows 2000

Installing Printer Software

- Place the software CD-ROM in the CD-ROM drive. Install will start automatically.

If the CD-ROM drive does not automatically run: Select **Run** from the **Start** menu, and type **x:\cdsetup.exe** in the Open box (where **x** is the drive letter for the CD-ROM drive), then click **OK**.

- When the opening screen appears, select the appropriate language.
- Click **Install the Samsung Software on your PC** and follow the on-screen instructions.

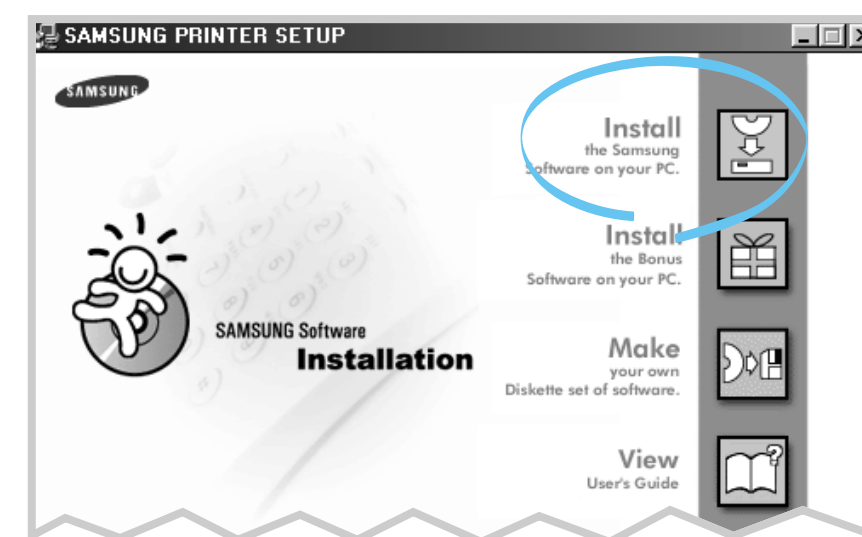

Software Installation Tips

How do I remove the printing software?

In Windows, after installation, the **Samsung ML-1200 Series Driver Maintenance** icon in the Samsung ML-1200 Series Program group allows you to select and remove any or all of the Samsung ML-1200 Series printing system components.

- From the **Start** menu, select **Programs, Samsung ML-1200 Series**, and **Samsung ML-1200 Series Driver Maintenance**.

- Click **OK**.
- The Samsung ML-1200 Series printer driver and all of its components are removed from your computer.
- Click **Finish**.

If you have problems installing:

- Exit your software programs. Then turn off the computer and the printer. Turn on the printer, then turn on the computer.
- Close any virus protection programs that are running on your computer.
- Uninstall the printer software using the instruction above, then repeat the installation procedure.

How do I use the USB cable?

Note: To connect the printer to the USB port of the computer requires a certified USB cable.

Windows 98

- Make sure that both the printer and computer are turn **ON**.
- Plug the USB cable into the USB port on the printer and the computer.
- The Add New Hardware Wizard dialog box appears. Click **Next**.
- Check **Search for the best driver for your device** and click **Next**.
- Check **CD-ROM drive** and click **Browse**, then choose **x:\USB**.
- Click **Next**. The USB driver will be installed.
- Follow the instructions on the screen to complete the installation.

Windows 2000

- You must install the printer driver before you connect the USB cable.
- The USB printer driver will be installed automatically.

For details, refer to the User's Guide (See page A.10) provided with your printer.

Printing the User's Guide

The Samsung ML-1200 Series User's Guide, which is on the software CD-ROM, is in Adobe Acrobat PDF format. The manual will give you flexibility and convenience when you have to access information. You can:

- view the manuals on-screen in different formats (side-by-side or two-up, one page at a time, scrolling two-up, article flow, and zooming capability up to 1600%).
- conduct full-text searches through all of the manuals.
- print only the manual page that you need.

- Place the CD-ROM in the CD-ROM drive.
- When the opening screen appears, select the appropriate language.
- Click **View User's Guide**. The Adobe Acrobat program opens and you can view the User's Guide.
- To print the manual, from the **File** menu, select **Print**.
- From the Print dialog box, set the necessary print setting and click **OK** to start printing.

Note: To open the User's Guide, you are required the Adobe Acrobat Reader program installed on your computer. If you do not have the program on your PC, click **Install the Bonus Software on your PC** to install the program.